

Figure 1A

1

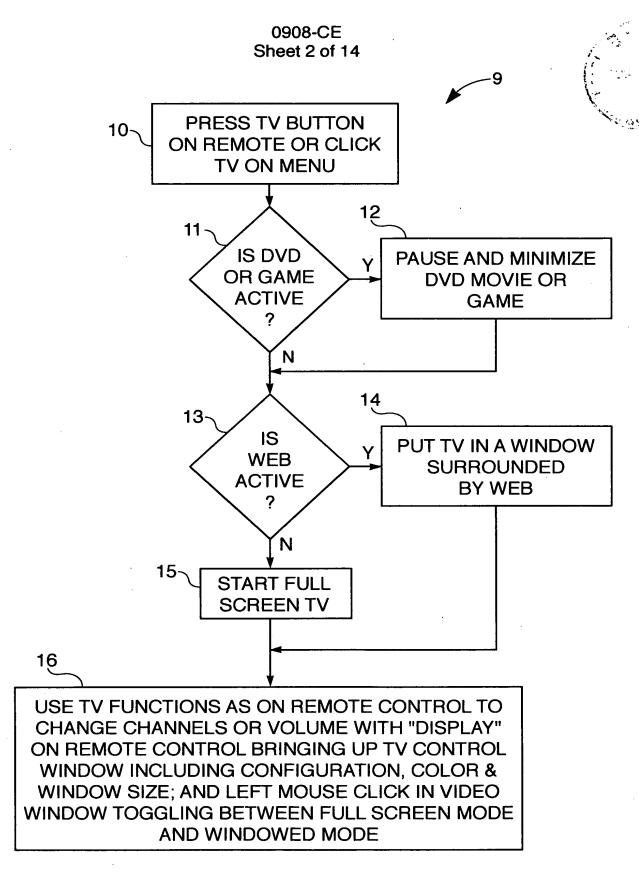


Figure 1B


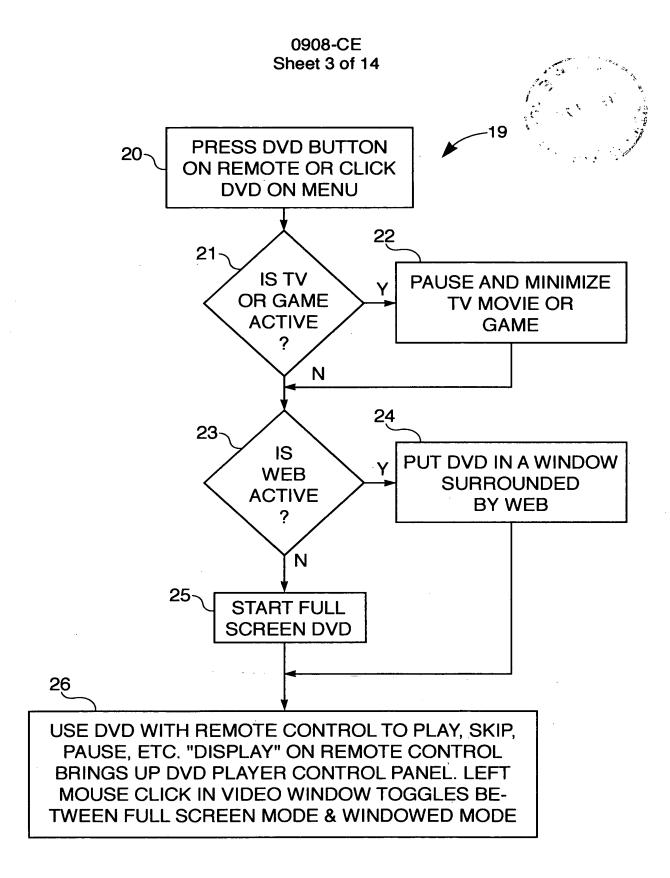



Figure 1C


0908-CE Sheet 4 of 14

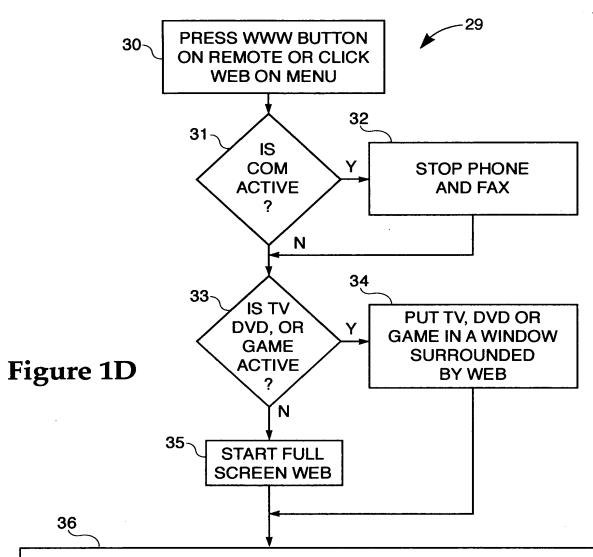

TV CHANNELS ARE SELECTED WITH CHANNEL UP & DOWN KEYS OR WITH #KEYS; FWD & RVS-BACK & FORWARD.

MOUSE IS USED TO NAVIGATE & SELECT PLAY AND DISCONNECT OPTIONS. "DISPLAY" ON RC BRINGS UP WEB SIZE OPTIONS, FULL SCREEN, BACKGROUND, TICKER FORMAT; IF INCOMING MAIL IS DETECTED, A MAIL ICON POPS UP ON THE LOWER RIGHT HAND CORNER OF THE SCREEN. CLICKING ON THE ICON OR PRESSING WEB WILL POP-UP EMAIL. CLICKING ON THE RIGHT MOUSE REMOVES THE ICON



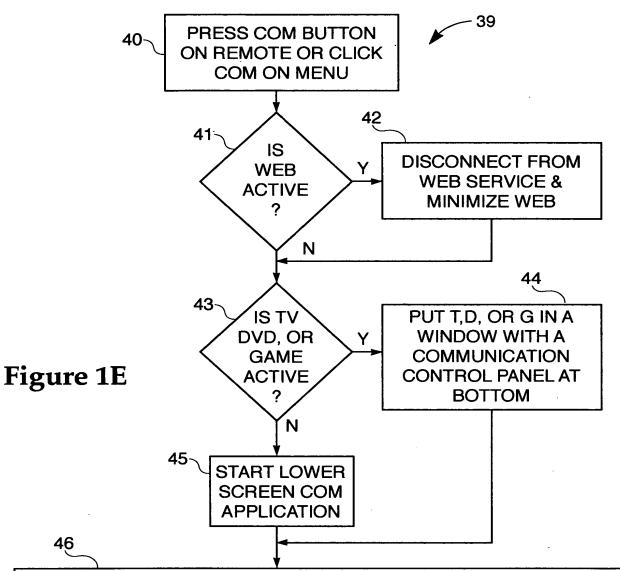

PHONE FNCS ON REMOTE CONTROL WHEN COM IS ACTIVE, EVEN IF MINIMIZED, WITH AN INCOMING CALL CAUSING A CALLER ID WINDOW TO POP UP IN THE LOWER RIGHT HAND CORNER OF THE SCREEN, ON TOP OF ANY ACTIVE APPLICATION INCLUDING TV, DVD, OR GAMES; PUSHING COM ON THE RC OR CLICKING ON THE CALLER-ID WINDOW WILL ANSWER THE CALL CAUSING THE DVD MOVIE OR GAME TO PAUSE OR SLIGHTLY LOWERING THE VOLUME OF THE TV WHILE POPPING UP THE COM CONTROL PANEL AND VOLUME MIXER; RIGHT MOUSE CLICK TURNS OFF CALLER-ID MESSAGE INDICATOR

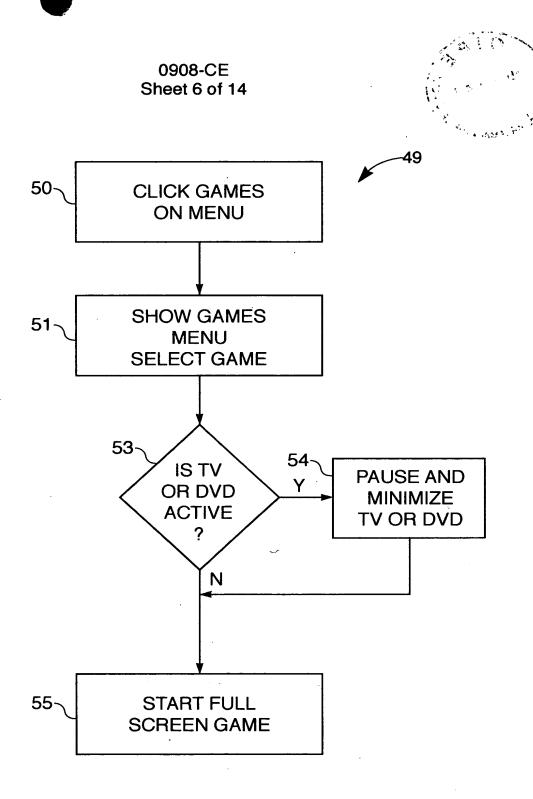


Figure 1F

0908-CE Sheet 7 of 14



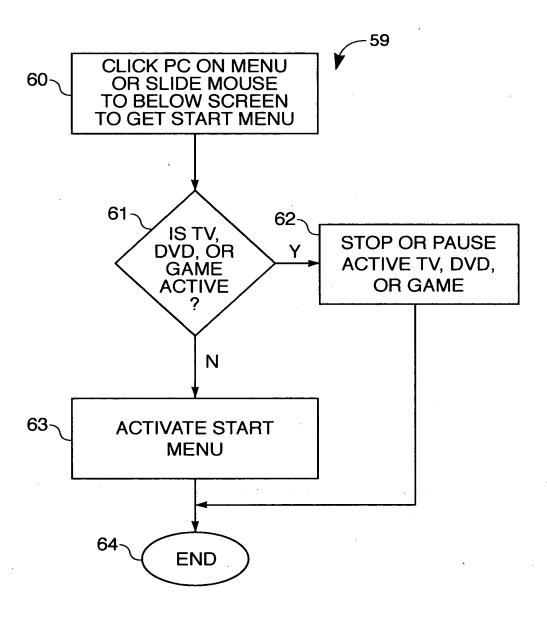


Figure 1G



0908-CE Sheet 8 of 14

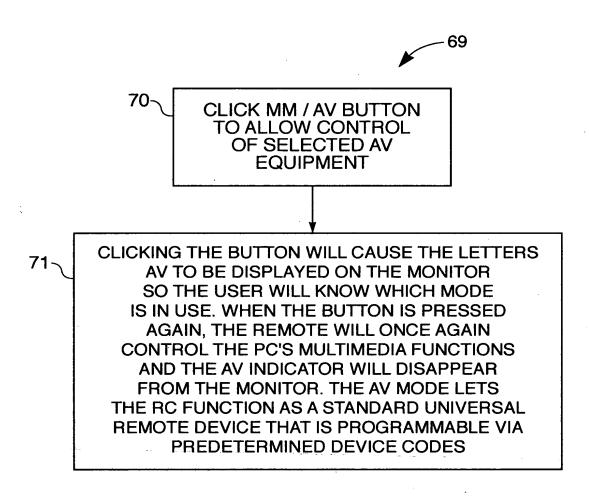
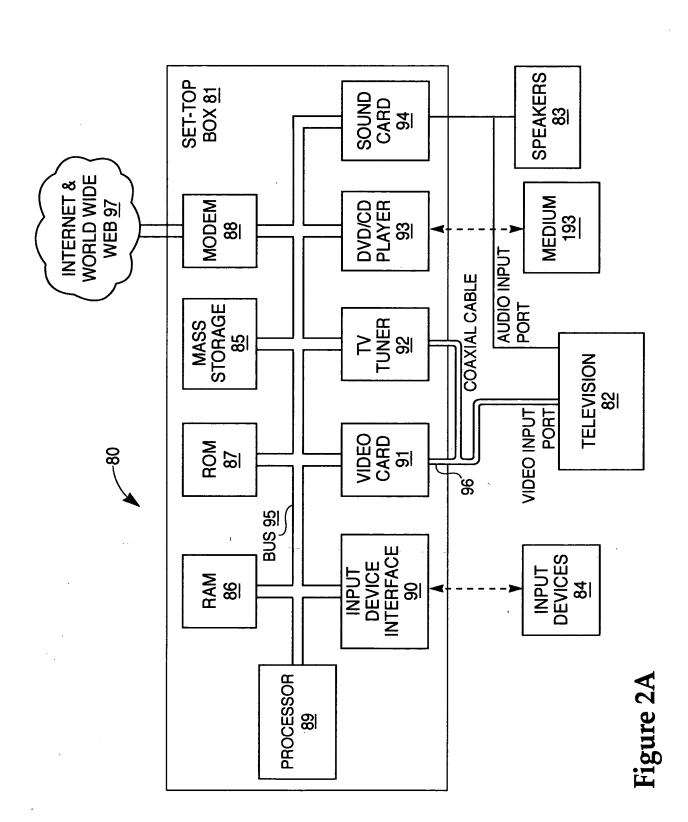


Figure 1H

The second of th

0908-CE Sheet 9 of 14




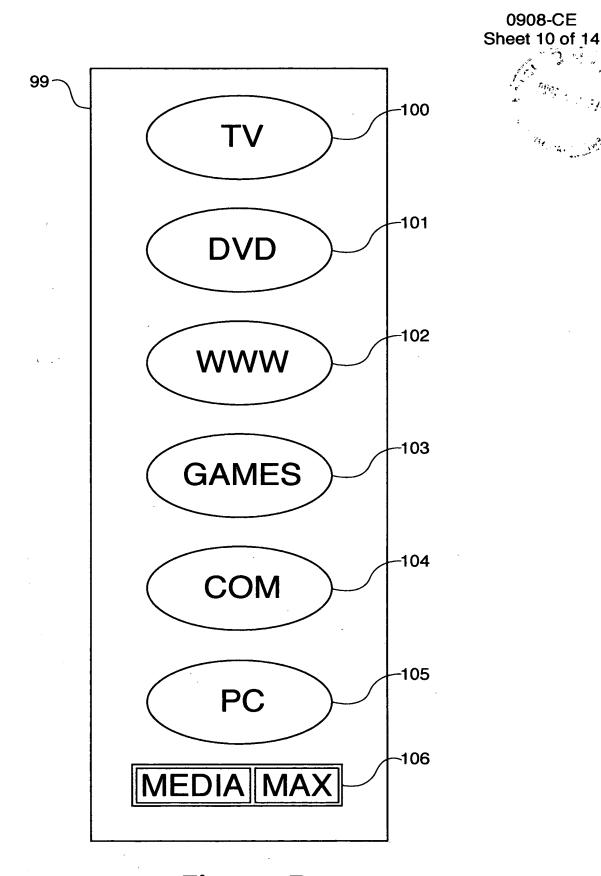


Figure 2B

0908-CE Sheet 11 of 14

CHILLED **≥** MOM'S **PARTY XMAS** FAVS 124 DVD 123 α က 2 MAX MEDIA 122 2 က Ŋ REW <u>10</u>6 WEB CD2 CD3 CD5 CD4 50 4 GAME **AUDIO MIXER M**V2 M **M**v4 Mv5 **₹** 120 PHONE

Figure 3

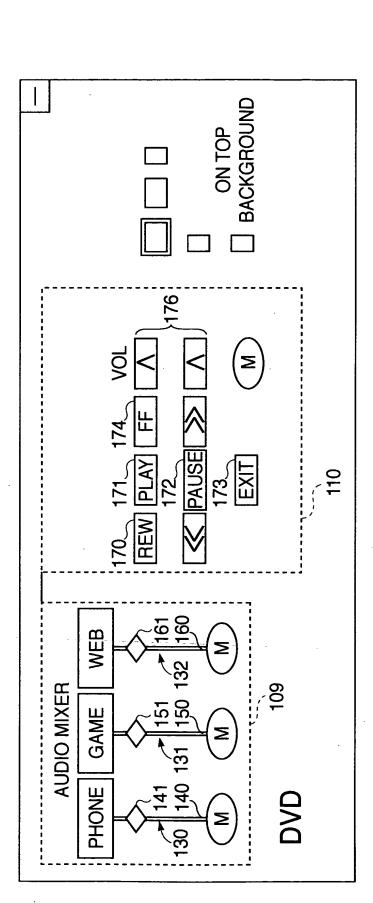

0908-CE Sheet 12 of 14

Figure 4



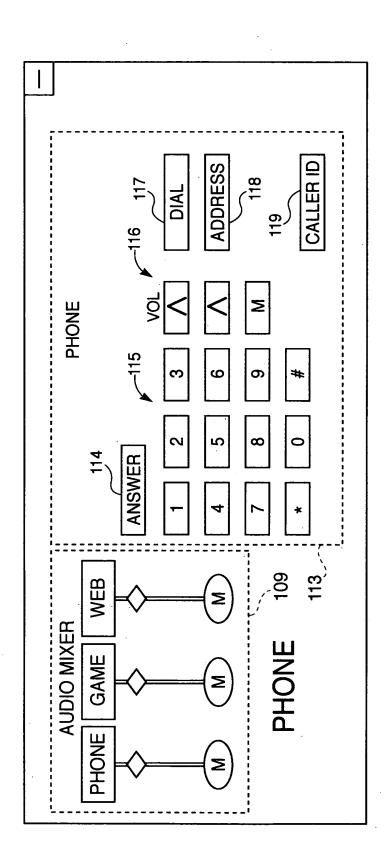


Figure 5

0908-CE Sheet 14 of 14

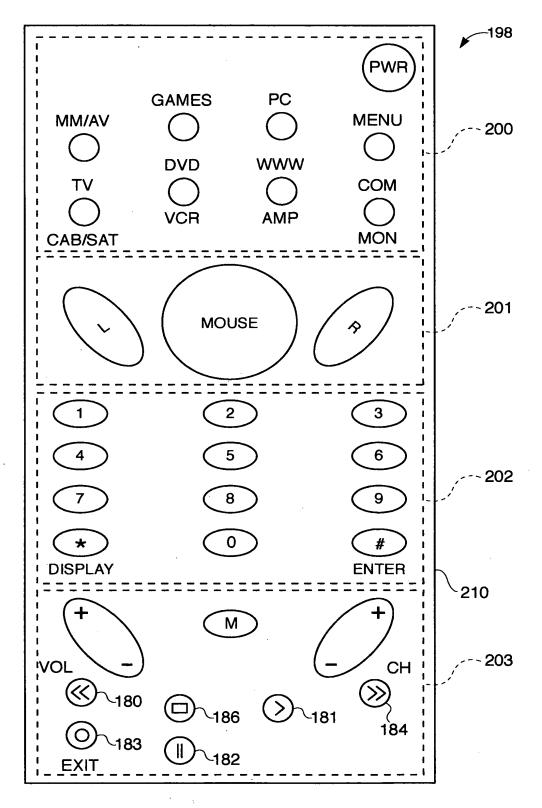


Figure 6